

FIG. 1

Simply clip the Slam Guard on the outer edge of door high enough to be out of child's reach.

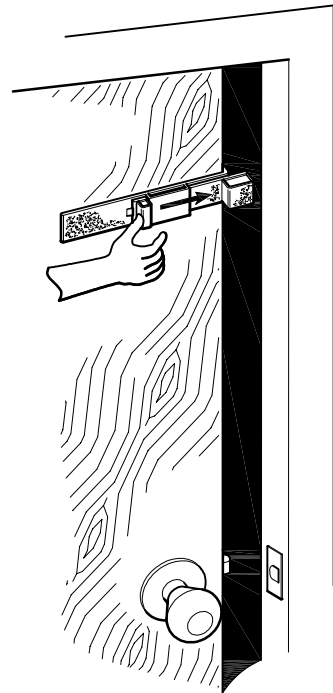


FIG. 2

To activate the Slam Guard, simply slide the guard out until it locks in place behind the spring loaded tab. The guard should be positioned between the edge of the door and the door jam as shown.

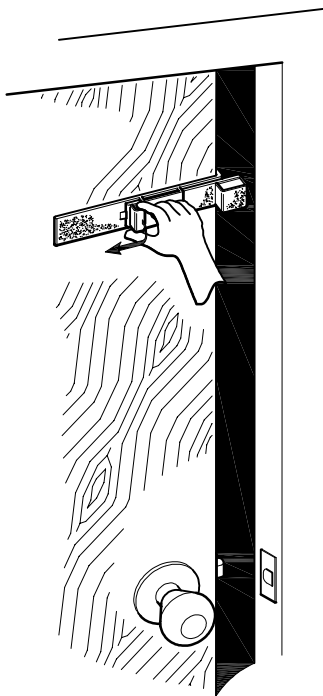


FIG. 3

To de-activate, simply lift the knob over the tab and retract the guard to allow normal door use.

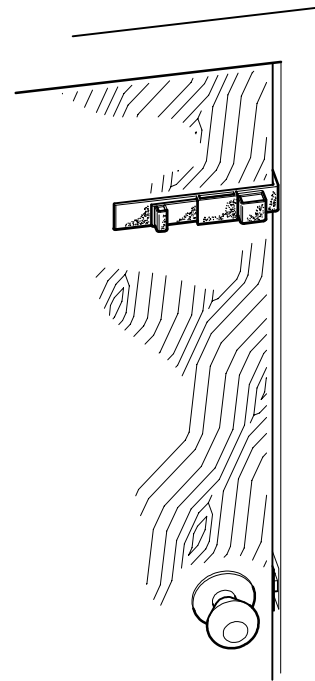


FIG. 4

It can stay on the door in its open and shut positions without the need to remove it every time the user needs to fully shut the door.